 
 


VI. WIFI connection operation (model with WiFi function)


1. Search the "Graffiti Intelligence" APP in the application market, register and log in, and click "Add Device".

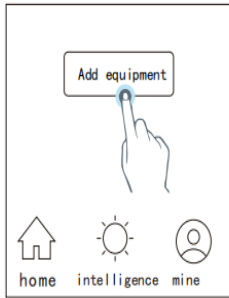


2. Select "WiFi" under the directory of "Small Appliances" in the device.

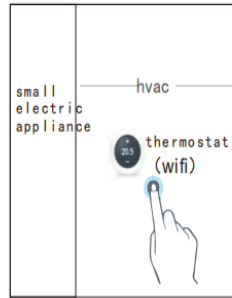


3. In the power-on state, the WiFi icon flashes after pressing the power-on key of the thermostat for 5 seconds.

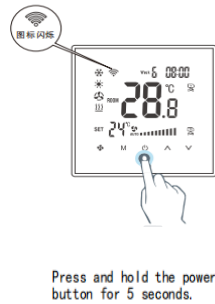


5. After selecting the 2.4GHz Wi-Fi network and entering the password, click "Next".

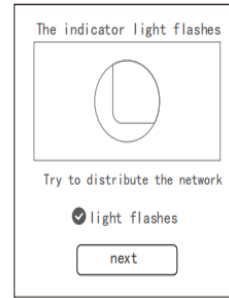


5. After selecting the 2.4GHz Wi-Fi network and entering the password, click "Next".

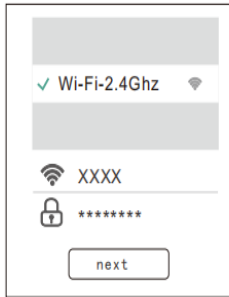


6. Wait for the equipment to be added, and the process will take about 1 minute.

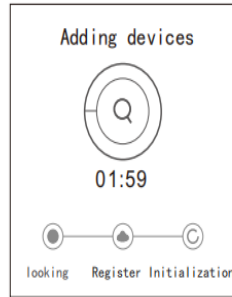

7. After waiting for more than ten seconds, the equipment addition will be completed soon.

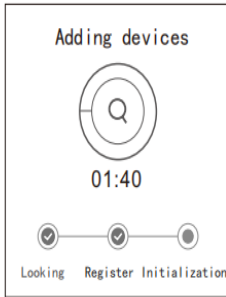

8. After the device is successfully added, you can happily use the mobile APP control.

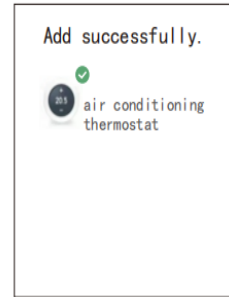

fan coil thermostat 8929 series

VII. Warranty and Precautions

The warranty period of this product is 24 months, counting from the date of product sales. In case of product failure, please contact the dealer. The following operations are not covered by the warranty:

1. human failure or warranty period and unauthorized disassembly and maintenance;
2. Loss or damage caused by force majeure or external reasons;
3. Misuse, accident, negligence, unauthorized modification or repair;
4. Use beyond the limit;
5. Violation of operating regulations.
6. One manual of the packaging accessories, one certificate of approval and two installation screws.

一、matters need attention

The input and output voltages of this product are dangerous, and improper operation will endanger life safety. Please read the manual carefully before operation. Unauthorized professional maintenance personnel, please do not disassemble and assemble without permission. All the consequences caused by the user's illegal operation shall be borne by the user himself and have nothing to do with the company.

Installation environment and precautions:


- ◆ Please cut off the power supply during installation.
 - ◆ The installation position should not be too low to avoid heat source;
 - ◆ Connect according to the wiring diagram. If you have any questions, please contact the dealer.
 - ◆ Overload operation is prohibited to avoid damage.
- ⚠: When wiring, do not put impurities such as water and mud into the controller, otherwise the device will be damaged.

二、the performance parameters

Temperature sensor: NTC
 thermostat control accuracy: 1°C
 Temperature setting: 05~35°C
 Display range: 0~50°C
 Working environment: 0~45°C
 Display: LCD
 Humidity: 5~95%RH
 (no condensation)

Power supply voltage: AC 180~260 V, 50/60 Hz
 Power consumption: < 1W
 Load power: 3A<200W, 10A<1000W.
 Terminal: 2*1.5mm or 1*2.5mm conductor.
 Shell: PC+ABS flame retardant
 Overall dimensions: 86*86*17mm (width*height*thickness)
 Installation hole spacing: 60mm (standard)

三、the wiring diagram

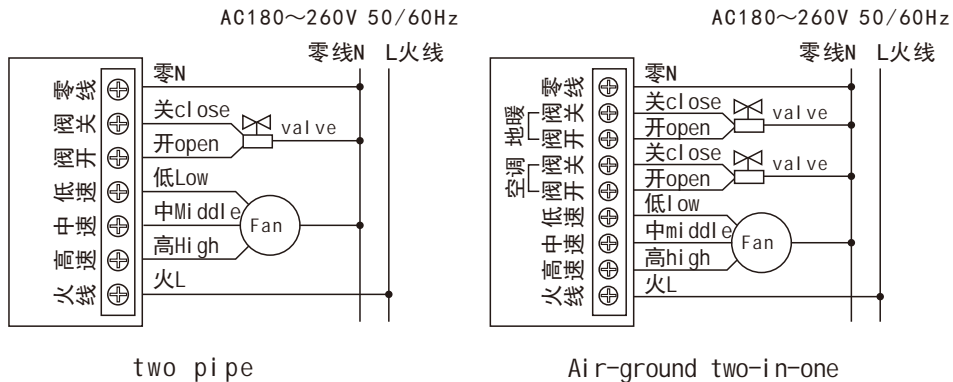


Note: If a normally closed two-wire valve is used on site, just connect the "valve open" terminal; If there is no valve, "valve open" and "valve close" need not be answered.


四、the function description



Display status description

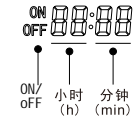

Case description

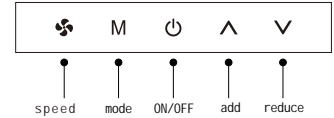

ON/OFF Key

◆ Press the "ON/OFF" key once to turn on the panel, and then press it again to turn it off.

Mode key M

◆ While powered on, Press the "M" key to switch modes: "❄" Cold wind mode, "☀" Warm air mode, "🌀" ventilation mode, "🔥" Floor heating mode, "☀"+"🔥" Warm air+ floor heating mode (note: this is only available for certain models).
 ◆ Press the "M" key for 5 seconds to enter the time setting, and then press the M key to switch to the time switch machine setting. Press M key to switch minutes/ hours, press "▲" to increase and "▼" to decrease, and confirm automatically after 5 seconds.

Wind speed key

◆ Press the "🌀" key to switch the wind speed ("🌀" low speed, "🌀" medium speed, "🌀" high speed and "🌀" automatic wind speed).

Child Lock

◆ Press "▲" and "▼" keys simultaneously for 5 seconds to enter the locked state (the screen displays "EL"), and then press "▲" and "▼" keys simultaneously for 5 seconds to unlock.

advanced options

◆ Press the "M" and "🌀" keys simultaneously for 5 seconds to enter the advanced settings. Do not move for non-technical personnel!!

V. Installation Diagram

