

A39C-T900A30D1a

Product Manual

915MHz, 1W, LORA Spread Spectrum Wireless Serial Module
Data encryption, fixed-point transmission



Version: Spec_A39C-T900A30D1a _V2.0

Date: 2023-1-21

Status: Controlled status

Catalog

Content

I. Product Overview.....	11
II, product features.....	11
III, series of products.....	22
IV. Electrical parameters.....	33
V. Module Functions.....	44
5.1 Recommended connection diagram (basic functions).....	44
5.2 Pin Definition.....	44
5.3 Pin Function.....	44
VI. Module commands.....	99
6.1 Command Format.....	99
6.2 Module parameter register.....	10
6.3 Module factory settings.....	12
VII. Module Functions.....	14
7.1 Module Function Overview.....	14
7.2 Detailed explanation of module functions.....	15
7.2.1 The concept of group number and address.....	15
7.2.2 Transparent Broadcast.....	15
7.2.3 Master-Slave Mode.....	15
7.2.4 Fixed-point transmission.....	16
7.2.5 Broadcast under fixed point transmission.....	17
7.2.6 Listening under fixed-point transmission.....	17
7.2.7 Wake up in the air.....	18
7.2.8 Low power consumption.....	18
7.2.9 Relay.....	19
VIII. Timing Chart.....	19
8.1 Data Transfer Timing Diagram.....	19
8.2 State Switching Timing Diagram.....	19
8.3 Module Command Timing Diagram.....	20
IX. Packaging Information.....	22
9.1 Mechanical dimensions (unit: mm).....	24 错误! 未定义书签。

915MHz, 1W, LORA Spread Spectrum Wireless Serial Module

Data encryption, fixed-point transmission

1. Product Overview

A39C-T900A30D1a is a 850-931MHz, 1W, industrial-grade wireless serial port module. LORA spread spectrum modulation, the measured transmission distance is up to 10000 meters. This module supports data broadcast, data monitoring, fixed-point transmission, master-slave mode, automatic relay, fixed-point wake-up and other transmission methods. It supports ultra-low power consumption, diverse functions and extremely high stability, and can be widely used in various environments to easily achieve low-frequency wireless data transmission.

2. Product Features

- With data broadcast, data listening, fixed-point transmission, master-slave mode, automatic relay, fixed-point wake-up, automatic answer
- Receiving sensitivity up to -129dBm, transmission distance of 10000 meters
- Sleeping current as low as 2uA
- Ultra-low reception power consumption
- AES encryption
- Readable module RSSI
- Built-in multiple exception handling mechanisms to ensure long and stable operation of the module
- Maximum single packet transmission 230 bytes
- Multi-level transmitting power
Four levels of adjustable power (0~3), each step of about 3dBm
Power range: 21~30dBm, max 1W
- Level baud rate ^[1]
Eight common baud rates, default baud rate is 9600bps
Baud rate range: 1200bps~115200bps
- Multi-level air rate ^[2]
Eight levels of adjustable air rate, default air rate 4.8kbps
1.2~62.5kbps
- Working state ^[3]
MD0 = 0 MD1 = 0
Enter command configuration mode
MD0 = 1 MD1 = 0
Exit command configuration mode
MD1 = 1 MD1 = 1
Normal operating state
- Frequency 82 channels available ^[4]
850MHz + CHAN * 1MHz
CHAN: 0x00~0x51H (corresponding to 850~931MHz)
Operates in the 915MHz application-free band by default
- Supply voltage range ^[5]
3.0V~5.5V

Built-in LDO to ensure stable power supply to the module, able to meet a variety of system requirements

- 512 bytes ring FIFO
- 512 bytes of transmit-receive FIFO

915MHz, 158mW, LORA Spread Spectrum Wireless Serial Module

Data encryption, fixed-point transmission

Internal automatic subcontracting of transfers

Some combinations of airspeed and baud rate can send infinitely long packets ^[1]

- Broadcast Data and Listening ^[6]

The module address is set to 0xFFFF to listen to data transmissions from all modules on the same channel.

The transmitted data can be received by any module at any address on the same channel

- Wake up in the air ^[6]

The sender in the wake-up mode will automatically add a wake-up code when sending data to wake up the target module in the power-saving mode

Same transmission method as fixed point transmission

- Fixed-point transmission ^[6]

Any module can send data and specify a module to receive it. When multiple receiver modules have the same address channel, they can all receive data.

Data can be transmitted point-to-point across channels

Can achieve a variety of applications such as networking and relaying

Remark.

[1] See the 0x04 register in Chapter 6, Section 6.2 Module Parameter Registers for details

[2] See the 0x06 register in Chapter 6, Section 6.2 Module Parameter Registers for details

[3] See Chapter 5 for pin definition and pin function details

[4] See the 0x06 register in Chapter 6, Section 6.2 Module Parameter Registers for details

[5] See Chapter 5 for details on power vs. voltage

[6] See Chapter 7, Module Functions for details

3. Series Products

Module Model	Carrier frequency (Hz)	Core Chip	Size (mm)	Maximum transmit power (dBm)	Communication distance (km)	Package	Antenna Form
A39-T433A21D1a	410M~441M	SX126x	20*36	21	5.0	Plug-in	IPEX
A39-T900A21D1a	850M~931M	SX126x	20*36	21	5.0	Plug-in	IPEX

4. Electrical parameters

Conditions: Tc = 25°C, VCC = 3.3V

Module Model	Parameter Name	Description	Minimum value	Typical values	Maximum value	Unit
A39C-T900A30D1a	Supply voltage	Supply voltage is less than 3.3V, the output power will be reduced, but the impact on the received power is small	3.0	3.3	5.5	V
A39C-T900A30D1a	Emission current	SendPower ^[1] = 0		610		mA
		SendPower = 1		520		mA
		SendPower = 2		360		mA
		SendPower = 3		270		mA
A39C-T900A30D1a	Receiving current	Enter configuration mode (MD0=0, MD1=0)		5		mA
		General operating mode (MD0=1, MD1=0)		6.4		mA
		Enter low-power mode (MD0=1, MD1=1)		2.5		uA
A39C-T900A30D1a	Dormant current	is the current measured in the dormant operating state (MD0=1, MD1=1)		2.5		uA
A39C-T900A30D1a	Operating Frequency Band	410~490MHz, 81 channels, 1MHz step, factory default 915MHz	850	915	931	MHz
A39C-T900A30D1a	Transmitting power	SendPower = 0		30		dBm
		SendPower = 1		27		dBm
		SendPower = 2		24		dBm
		SendPower = 3		21		dBm
A39C-T900A30D1a	airspeed	8 levels adjustable (1.2kbps, 2.4kbps, 4.8kbps, 9.6kbps, 19.2kbps, 38.4kbps, 50kbps, 62.5kbps)	1.2k	4.8k	62.5k	bps
A39C-T900A30D1a	Reception sensitivity	Receiving sensitivity is independent of serial port baud rate and delay time		-129		dBm@2.4kbps
A39C-T900A30D1a	Operating temperature		-40		+85	°C
A39C-T900A30D1a	Working humidity	Relative humidity, non-condensing	10%		90%	
A39C-T900A30D1a	Storage temperature		-40		+125	°C

Remark.

[1] See the 0x06 register in Chapter 6, Section 6.2 Module Parameter Registers for details

5. Module Function

5.1 Recommended connection diagram(basic functions)

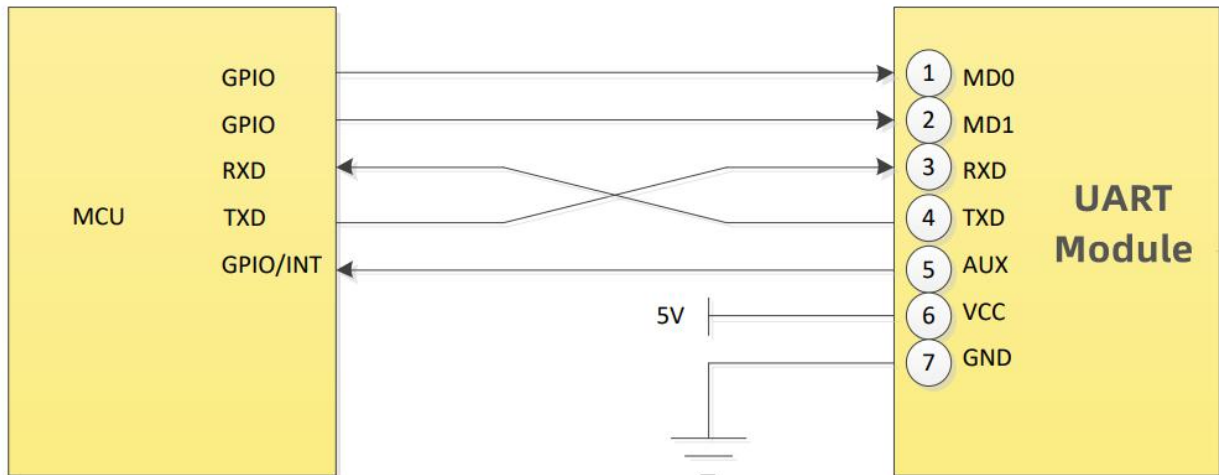


Figure 5-1 Recommended connection diagram

5.2 Pin Definition

Pin Definition Table

Pin Serial Number	Pin Name	Pin Orientation	Pin Usage
1	MD0	Input (very weak pull-up)	Together with the low latency operating state pin MD1, it determines the four operating states of the module
2	MD1	Input (very weak pull-up)	Together with the low latency operating state pin MD0, it determines the four operating states of the module
3	RXD	Input	TTL serial input, connected to external TXD output pin, can be configured as open drain or pull-up input, see parameter configuration for details
4	TXD	Output	TTL serial output, connected to external RXD input pin, can be configured as open drain or push-pull output, see parameter configuration for details
5	AUX	Output	Used to indicate the working status of the module, the user wakes up the external MCU, output low during power-on self-test initialization, can be configured as open-drain output or push-pull output, see parameter settings for details
6	VCC		Power supply, voltage 3.0 ~ 5.5V (Note: below 3.3V, the output power is reduced, but the impact on reception performance is small)
7	GND		Ground wire, connected to power reference ground

5.3 Pin Function

MD0 and MD1 low latency operating state pin functions

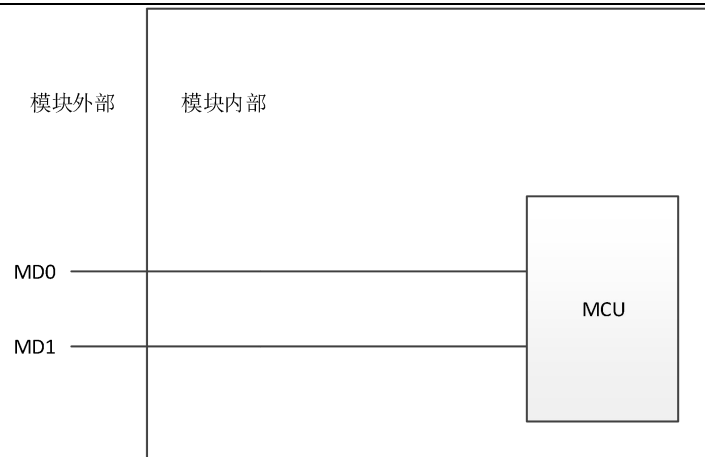


Figure 5-2 Schematic diagram of the internal structure of MD0 and MD1 pins

The free combination of high and low levels of the low-latency operating state pins MD0 and MD1 can determine the operating state of the wireless serial module, and these operating states can be freely switched.

The following two special cases need to be noted when switching between working states.

1, the module receives wireless data has not yet been output, then the data output is completed and then enter a new state.

2, the module sends wireless data has not yet been sent, then the data is sent to a new state after completion.

Working status table


Working Status	MD0	MD1	Working state introduction
Enter configuration mode	0	0	The serial port parameters go to 9600, 8, n, 1. The data received will be processed as configuration parameters and the wireless goes into sleep mode and no messages can be received.
Exit configuration mode	1	0	Reconfigure the peripheral with the configured parameters, run with the new configuration, serial port on, wireless on
Enter low power mode	1	1	The serial port is off, the wireless is off, and it is in very low-power mode, and it will wake up periodically on its own to receive the wake-up code, and the module is in a power-saving working state at this time.
Exit low power mode	X	0	The serial port is open, wireless is open, all peripherals are running normally, at this time the module is in general working state, when the sleep time register is configured, then the device will automatically add the wake-up code before sending data, at this time the module is in wake-up working state.

Status Communication Table

Receiving Send		Working Status			Data transfer mode		
		General Working Status	Awakening Working Status	Power saving Working Status	Transparent Broadcasting	Broadcast and Monitoring	Fixed-point transmission
Working Status	General working condition	Y	Y		Y	Y	Y
	Wake up working state	Y	Y	Y	Y	Y	Y

AUX Pin Function

Figure 5-3 AUX pin internal structure diagram

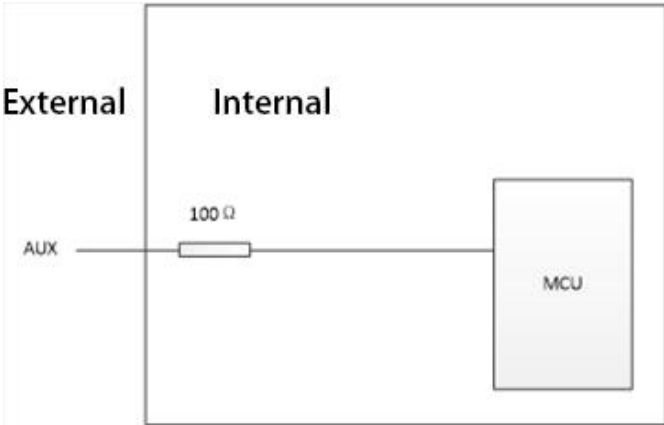


AUX is used for wireless transceiver buffer status indication. It indicates whether the module's internal buffer is currently overflowing. During power-on initialization, the module pulls down the AUX, which is inoperable until the initialization is completed and the module pulls up the AUX, at which time the module can be operated normally.

In operating mode, AUX will be continuously high. If the internal buffer is full, the module pulls AUX low, the serial port is closed and does not continue to receive serial data until the buffer has enough space to be released and AUX is pulled high.

RXD and TXD pin functions

Figure 5-4 Internal structure of RXD and TXD pins

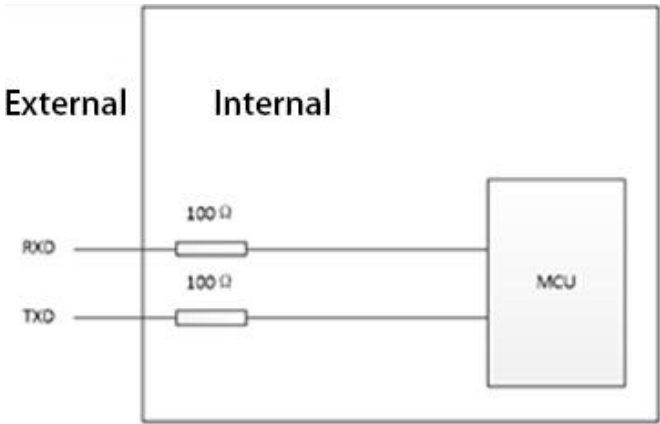

RXD and TXD serial data sending and receiving pins, at the same time, the serial port baud rate can be customized, more convenient for development, the supported baud rate range 1200 ~ 115200 (bps); serial port parity also has odd parity, even parity, no parity to choose from. The format of serial port transmission bytes is as follows.



Figure 5-5 Serial port transmission byte format

IDLE: High when idle

St: Starting position

P: Parity bit

Sp1: Stop bit

Remark.

【1】 Need to set the data bits to 7 bits, then set the frame length to 8 bits and the parity bits to ODD or EVEN

【2】 If you need to set 8 as data bits with parity bit, you need to set the frame length to 9 bits and then set the parity bit to ODD or EVEN

VCC and GND pin functions

GND indicates the ground wire, VCC indicates the power supply, and the module power itself has with LDO, input voltage range: 2.0~5.5VDC, as follows.

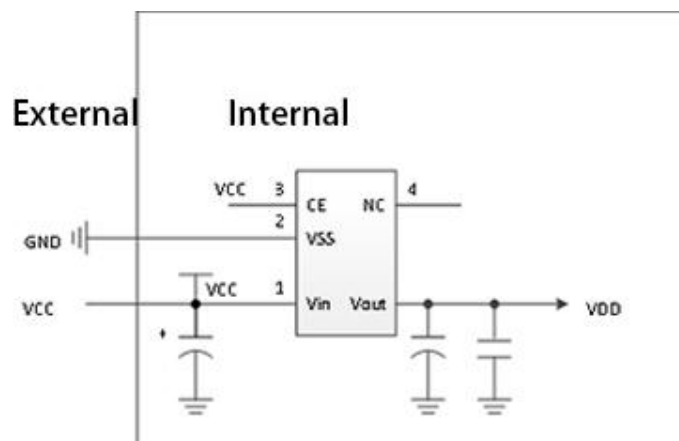


Figure 5-6 Power Supply LDO

Note: The input power supply ripple coefficient should be controlled within 100mV, and can provide instantaneous pulse current of 200mA or more

When the supply voltage is less than the critical value, the output power decreases, but the impact on the reception performance is small. The relationship between power and voltage is shown in Figure 5-7.

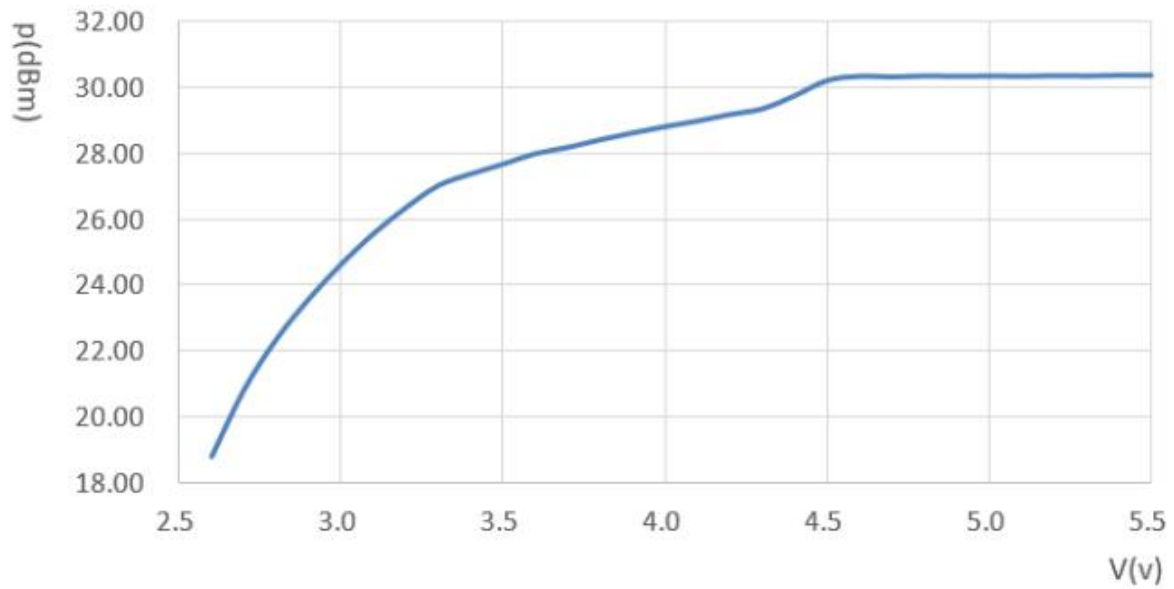


Figure 5-7 Power versus voltage

6. Module commands

6.1 Command Format

The parameter configuration command only supports parameter modification in configuration mode, i.e., when MD0 pin is low (MD0 = 0, MD1 = 0), and the serial port parameters are 9600, 8N1 at this time.

The configuration command is implemented by adding the register address and register length to the command word, which can realize the configuration of multiple configuration items continuously at the same time.

The command format is as follows.

Command word	Register start address	Number of configuration registers	Register Value	Register Value	Register value n
CMD	REG	LEN	DATA0		DATAn
CMD [7] 0 for read, 1 for write	The range of REG in this model is 0x00~0x21	Indicates the number of registers to be operated. When the number of registers to be operated exceeds the number of current operation rights, an error will be returned, for example, if a read-only register is written, an error will be returned.	When reading, you can leave it unfilled, when writing, make sure to correspond to the register length and total length, otherwise it will report an error		
CMD [6] 0 for local command, 1 for remote configuration					
CMD [5]. 0 is return operation success, 1 is return operation error					
CMD[4...0] Reserved					

Note: The register address is a functional distinction, not according to the occupied bytes to be divided

Command functions are detailed in the following table, using the default factory configuration as an example.

Command Format	Module Answer	Description
0x80 ADDR LEN VAL1 VAL2 ... VALn (See parameter configuration register description for details)	0x80 ADDR LEN	Configuration success, configuration parameters power down and save
	0xC0 ADDR LEN	Configuration failed, the original configuration parameters were not changed
0x80 0x0B 0x01 0x77 0x77 0x77 0x2E 0x61 0x73 0x68 0x69 0x6E 0x69 0x6E 0x67 0x2E 0x63 0x6F 0x6D	0x80 0x0B 0x01	Data key success
	0xC0 0x0B 0x01	Data key failure
0x00 0x04 0x1B	0x00 0x00 0x25 0x80 0x00 0x02 0xBD 0x00 0x01 0x05 0x03 0xE8 0x00 0x77 0x77 0x77 0x77 0x2E 0x61 0x73 0x68 0x69 0x6E 0x69 0x6E 0x67 0x2E 0x63 0x6F 0x6D 0x7C 0x7C 0x7C 0x7C 0x7C 0x7C 0x05 0x40 0x00 0x23 0x00	The module returns the parameters of all currently writable registers in hexadecimal format

	0x00 0x00 0x00 0x3C 0x3C 0x00 0x0A 0x04 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00	
0x00 0x00 0x01	A39C-T900A30D1a -v1.0.1	The module will return the current version number in ASCII format
0x80 0x20 0x01	OK	The module generates a reset, during which the module performs a self-test and the AUX goes low, after the reset the AUX goes high and the module starts to work normally. At this time, you can switch the status or initiate the next command
0x80 0x21 0x01	OK	Restore default parameters configuration successfully
0x00 0x01 0x01	XXXX	Read the current data signal RSSI and environment signal RSSI directly. e.g. the module returns XXXX, the first two XX represent the current environment RSSI, the last two XX represent the current data RSSI, convert them to decimal data, it means the current signal strength. This command can be used in all modes

6.2 Module parameter register

Serial number	Address	Register Permissions	Register Length	Register Description
1	0x00	R	20	Module Version Number
2	0x01	R	4	The first two bytes indicate the current environment RSSI, and the last two bytes indicate the current packet RSSI
3	0x02	R	2	Reserved
4	0x03	R	2	Reserved
5	0x04	R/W	4	Serial port baud rate of the module, customizable in the range of 1200~115200bps
6	0x05	R/W	1	Serial port parameters of the module Bit4 is the frame length (data bits + parity bits) 0 for 8 bits 1 for 9 bits Bit5 is the stop bit 0 is 1 bit 1 is 2 bits Bit2 Bit1 is the parity bit 00 is no parity 10 is even parity 11 is odd parity
7	0x06	R/W	2	Bit10 Bit9 Bit8 Bit7 Bit6 Bit5 is the channel number, the default is 1000001 (65) channels Bit4 Bit3 for power 11 : 30dBm 10 : 27dBm 01 : 24dBm 00 : 21dBm Default is 11, power is 30dBm Bit2 Bit1 Bit0 111 : 62.5K 110 : 50K

				101 : 38.4K 100 : 19.2K 011 : 9.6K 010 : 4.8K 001 : 2.4K 000 : 1.2K Default is 010 with an airspeed of 4.8K [2]
8	0x07	R/W	2	Working mode 0x0001, Pass-through 0x0002, fixed point 0x0004, Master-Slave 0x0020, Relay 0x0080, Polling mode 0x0400, Timing up 0x0100, Passing
9	0x08	R/W	1	Auto-answer settings Bit8 is 0 for off, 1 for enable Bit7~Bit0 indicates the number of re-transmissions
10	0x09	R/W	2	Auto-answer re-transmission interval, in ms
11	0x0A	R/W	1	Device as master or slave Bit2 Master (1) or slave (0) of the timed reporting mode Bit1 Master (1) or slave (0) in polling mode Bit0 Master (0) or slave (1) of master-slave mode
12	0x0B	R/W	16	AES Key
13	0x0C	R/W	5	Package-to-package separator content
14	0x0D	R/W	1	Use the length of the separator in bytes
15	0x0E	R/W	1	Serial packet length in bytes
16	0x0F	R/W	2	Serial port packing cycle in 0.1ms
17	0x10	R/W	2	Reserved
18	0x11	R/W	1	Reserved
19	0x12	R/W	1	Reserved
20	0x13	R/W	1	Reserved
21	0x14	R/W	1	Low power consumption level in 100ms units
22	0x15	R/W	1	Reserved
23	0x16	R/W	1	Data window length in polling mode and active reporting mode, in 200ms
24	0x17	R/W	2	Job Options Bit9 turns on data sending before scanning for new to idle Bit8 opens data sending with random delay before sending Bit6 opens the group number output to request lost packets after the reception is complete Bit5 opens the function of group packet output Bit4 turns remote configuration on or off

				Bit3 When configured over the air, whether to reply to ACK, only available in one-to-one configuration Bit2 When configured over the air, whether to output the result from the serial port Whether to output packet and packet separator on Bit1 serial output Bit0 output address
25	0x18	R/W	1	Local Group Number
26	0x19	R/W	1	Local Address
27	0x1A	R/W	1	Target group number
28	0x1B	R/W	1	Destination Address
29	0x1C	R/W	1	In relay mode, the path A group number
30	0x1D	R/W	1	Relay mode, path A address
31	0x1E	R/W	1	In relay mode, the path B group number
32	0x1F	R/W	1	Relay mode, path B address
31	0x20	X	1	Module reboot
32	0x21	X	1	Module restores factory settings

[1] The air rate of both sides of the communication must be consistent

[2] Some combinations of airspeed and baud rate can send infinitely long packets, as detailed in the following table

6.3 Module factory settings

Register factory configuration table.

Serial number	Address	Register Permissions	Register Length	Default Parameters
1	0x00	R	20	A39C-T900A30D1a -V1.0.1, module version number
2	0x01	R	4	0x0000 (default), which means that the current environment RSSI is 0x00 and the current package RSSI is 0x00
3	0x02	R	2	Reserved
4	0x03	R	2	Reserved
5	0x04	R/W	4	0x00002580 (9600bps, default) serial port baud rate of the module, customizable, range 1200~115200
6	0x05	R/W	1	0x00 (default) Bit4 is 0. Indicates that the data bits are 8 bits Bit5 is 0. Indicates that the stop bit is 1 bit Bit2 Bit1 is 00 means no checksum Serial port parameters are 8-bit data bit 1-bit stop bit No parity bit
7	0x06	R/W	2	0x02FC (default) Bit10 Bit9 Bit8 Bit7 Bit6 Bit5 is the channel number, the default is 1000001 (65) channels Bit4 Bit3 is the power number, the default is 11, the power is 30dBm Bit2 Bit1 Bit0 is the null speed number, default is 010, the null speed is 4.8K
8	0x07	R/W	2	0x0001 (default) Operating mode is transparent transmission
9	0x08	R/W	1	0x05 (default)

				Bit8 is 0 to turn off stable transmission by default Bit7~Bit0 is 5, which means the default number of re-transmission is 5 times
10	0x09	R/W	2	1000 in ms, stable transmission re-transmission interval is 1S by default
11	0x0A	R/W	1	0x00 (default) Bit0=0 means that when in master-slave mode, as the host Bit1=0 means that when in polling mode, as a slave Bit2=0 means that when it is in the timed-up report, it acts as a slave
12	0x0B	R/W	16	0x77 0x77 0x77 0x2E 0x61 0x73 0x68 0x69 0x6E 0x69 0x6E 0x67 0x2E 0x63 0x6F 0x6D (default) Indicates that the packet is encrypted using the above AES key
13	0x0C	R/W	5	(default) When the separator output is turned on, the above separator is output between packages
14	0x0D	R/W	1	0x05 (default) Indicates that the maximum valid length for using separators is 5
15	0x0E	R/W	1	64 (default) When the serial input is more than 64 bytes, then every 64 bytes will be treated as 1 packet
16	0x0F	R/W	2	35 (default) When the serial port data idle time exceeds 3.5ms, then the currently received data is treated as a packet
17	0x10	R/W	2	Reserved
18	0x11	R/W	1	Reserved
19	0x12	R/W	1	Reserved
20	0x13	R/W	1	Reserved
21	0x14	R/W	1	0 (default) No wake-up code and no sleep will be sent by default
22	0x15	R/W	1	Reserved
23	0x16	R/W	1	25 (default) Each window time is 5S
24	0x17	R/W	1	0x04 (default) Turn off wireless configuration function, turn off wireless reply to remote configuration result, turn on serial reply to wireless configuration result, turn off outputting separator between packets. Turn off outputting addresses.
25	0x18	R/W	1	0x00, the local group number is 0x00
26	0x19	R/W	1	0x00 with a local address of 0x00
27	0x1A	R/W	1	0x00, the target group number is 0x00
28	0x1B	R/W	1	0x00, the destination address is 0x00
29	0x1C	R/W	1	0x00, in relay mode, the path A group number is 0x00
30	0x1D	R/W	1	0x00, in relay mode, the path A address is 0x00
31	0x1E	R/W	1	0x00, in relay mode, the path B group number is 0x00
32	0x1F	R/W	1	0x00, in relay mode, the path B address is 0x00

7. Module Function

7.1 Module Function Overview

Module Menu

Module Function	Data format of the sender	Receiver data format	Function Introduction
Transparent Broadcasting	User Data	User Data	Any module that sends data can be received by modules with the same address and the same channel. Sending data is transparent, and what is sent is received.
Master-Slave Mode	Host: Receiver address + user data Slave: User data	User Data	The host can set to send data to a single slave, or send data to multiple slaves at the same time, and any slave sending data can be received by the host.
Fixed-point transmission	Receiver address + receiver channel + user data	User Data	Any module can send data and specify a module to receive it, and multiple receiving modules can receive data when they have the same address channel. Data can be transmitted point-to-point across channels.
Broadcast and Monitoring (under fixed-point transmission)	0xFF+0xFF+receiver channel+user data	User Data	Broadcast: any module sends data, and all modules under the same channel can receive data at the same time. Listening: modules with 0xFFFF address can receive data sent by modules with any address under the same channel.
Wake Up in the Air	1. In transparent transmission mode. The wake-up code will be sent automatically before sending the data packet, and when the wake-up code is sent, the data will be sent immediately afterwards, and the user does not need to care about the internal operation, but only needs to send the user data 2. In fixed transmission mode. The module will first switch to the target channel and then automatically send a wake-up code to wake up the target module to send the packet immediately afterwards, the user needs to add the target address and channel in the header of the packet first in this mode. Target module group number + target module address + target module channel + user data	User Data	1、 The sender module in the wake-up state can wake up the receiver module in the power-saving state over the air 2、 Modules in wake-up mode automatically send a wake-up code first when sending data 3、 The number of wake-up codes sent can be set by setting the wireless wake-up time
Low power consumption		User Data	Configure the module's receive response delay time to adjust the module's overall power consumption, the module can be configured to receive the maximum response delay register 0x14 is 255, in this

			configuration the module's average current is extremely low
Relay	User Data	User Data	Relay can be used in case of insufficient transmission distance. After receiving the data, the relay node will transmit the data to the next level as it is until the destination address is the same as the address of the module, then it will output the data.

7.2 Module Function Details

7.2.1 The concept of group number and address

Function Description

Each function has the concept of group number and address in it, and with the concept of group number, it is more flexible than the traditional serial module in the way of using.

If the module's local group number and local address are both set to 0xFF, the module will listen to all data on the current channel

If the module's target group number is set to 0xFF, the module sends data that is broadcast to all groups of the target address module

If the module's destination address is set to 0xFF, the module sends data that is broadcast to all addresses in the current destination group

7.2.2 Transparent Broadcasting

Function Description

Any module sends data, and all modules with the same address and the same channel can receive data at the same time.

Data is sent and received in a transparent manner, and what is sent is received.

Module Settings

1. MD0 = 0, MD1 = 0
2. Need to configure 0x07 special function register to 0x0001, transparent transmission mode
3. The destination address of the sending module and the local address of the receiving module are set to the same value
4. The channels of the transmitter and receiver modules are set to the same value
5. MD0 = 1, MD1 = 0

Examples

Sender		Receiver	
Target group number address	0x00 0x01	Local group number address	0x00 0x01
Module channel airspeed	0x17 (default)	Module channel airspeed	0x17 (default)
Sending data	0123456789	Receiving data	0123456789

7.2.3 Master-Slave Mode

Function Description

The master can send data to the specified slaves, and all slaves can receive the data sent by the master.

Module Settings

1. MD0 = 0, MD1 = 0
2. Need to configure 0x07 special function register to 0x0004, master-slave mode
3. The addresses of the transmitter and receiver modules can be set differently
4. The channels of the transmitter and receiver modules are set to the same
5. MD0 = 1, MD1 = 0

Examples

Sender		Receiver	
Target group number address	0XXXXX	Local group number address	0x5678
Modular channels	0x18	Modular channels	0x18
Master-Slave	Mainframe	Master-Slave	From the machine
Sending data	Receive address high + receive address low + data	Output Data	User Data
	0x56 0x78 0x11 0x22 0x33		0x11 0x22 0x33

7.2.4 Fixed-point transmission

Function Description

Any module can send data and specify a module to receive it. When multiple receiver modules have the same address channel, they can all receive data.

Module Settings

1. MD0 = 0, MD1 = 0
2. Need to configure 0x07 special function register to 0x0002, fixed point transfer mode
3. The addresses of the transmitter and receiver modules can be set differently
4. The channels of the transmitter and receiver modules can be set differently
5. MD0 = 1, MD1 = 0

Examples

Sender		Receiver	
Target group number address	0XXXXX	Local group number address	0x5678
Modular channels	0XXXXX	Modular channels	0x18
Sending data	Receive address high + receive address low + receive channel + data	Output Data	User Data
	0x56 0x78 0x18 0x11 0x22 0x33		0x11 0x22 0x33

7.2.5 Broadcast under fixed point transmission

Function Description

Any module sends data, and the modules under the same channel can receive data.

Module Settings

1. MD0 = 0, MD1 = 0
2. Need to configure 0x07 special function register to 0x0002, fixed point transfer mode
3. The addresses of the transmitter and receiver modules can be set differently
4. The channels of the transmitter and receiver modules can be set differently
5. The first 3 bytes of the sender's data must be 0xFF+0xFF+receiver channel
6. MD0 = 1, MD1 = 0

Examples

Sender		Receiver	
Target group number address	0XXXXX	Local group number address	0XXXXX
Modular channels	0XXXXX	Modular channels	0x17 (factory default)
Sending data	0xFF+0xFF+receive channel+user data	Output Data	User Data
	0xFF 0xFF 0x17 0x11 0x22 0x33		0x11 0x22 0x33

7.2.6 Listening under fixed-point transmission

Function Description

Any module sends data, and the modules under the same channel can receive data.

Module Settings

1. MD0 = 0, MD1 = 0
2. Need to configure 0x07 special function register to 0x0002, fixed point transfer mode
3. The address of the listener module must be set to 0xFFFF
4. The channels of the listener and transmitter modules must be set to the same
5. The first 3 bytes of the sender's data must be 0xFF+0xFF+receiver channel
6. MD0 = 1, MD1 = 0

Examples

Sender		Receiver	
Destination group number address	0x0000 (factory default)	Local group number address	0xFFFF
Modular channels	0x17 (factory default)	Modular channels	0x17 (factory default)
Sending data	arbitrary address high + arbitrary address low + receive channel + user data	Output Data	User Data
	0xFF 0xFF 0x17 0x11 0x22 0x33		0x11 0x22 0x33

7.2.7 Wake Up in the Air

Function Description

The transmitter module in the wake-up state can wake up the receiver module in the power-saving state over the air. If a valid wake-up code is received during the "listening" process, the module will calculate the time of the arrival of the valid data. If the time of valid data arrival is longer than the time of three wake-up codes, the device will continue to enter the sleep state and wait until the data arrives to wake up and receive the data automatically. If it is less than the time of three wake-up codes, the module will keep waiting for the valid data packets. After receiving, the serial port will be opened and the received wireless data will be sent through TXD, after sending, the module will continue to enter the "sleep-listening" working state.

Module Settings

1. The sender module must be operating in the wake-up working state ($MD0 = 1, MD1 = 0$)
2. The sender sets the length of the wake-up time by setting the wireless wake-up time register 0x14. The wireless wake-up time of the sender module is greater than or equal to the listening interval of the receiver module to ensure that the receiver module can listen to the wake-up code when it is in the power-saving working state. After receiving the wake-up code, the receiver module calculates whether it needs to enter the sleep state again. If the time of valid data arrival is greater than the time of three wake-up codes, the module will enter the sleep state again and wake up before the arrival of valid data to complete the data reception.
3. Receiver module must be in power-saving operation ($MD0 = 1, MD1 = 1$)
4. Set the listen interval time register 0x14 of the receiver module to ensure that the receiver module can receive a valid wake-up code within the listen interval time.
5. In general application cases, it is sufficient for both the sender and receiver modules to set the wake-up time register 0x14 to the same value.

7.2.8 Low power consumption

Function Description

The wake-up module is in the power-saving state, and the module will listen to the wake-up code or not at regular intervals. If no wake-up code is received, the module will always be in the "sleep-listening" state. If a wake-up code is received during the wake-up listening process, the receiving module calculates whether it needs to enter the sleep state again. If the time of valid data arrival is longer than the time of three wake-up codes, the module will enter the sleep state again and wake up before the arrival of valid data to complete the data reception.

By setting different listening interval times, the module has different receive response latency and average power consumption. Users need to strike a balance between the communication delay time and the average power consumption time.

Module Settings

1. Set the operating state of the module to power-saving operation ($MD0 = 1, MD1 = 1$)
2. Set the module's wireless wake-up time register 0x14

7.2.9 Relay

Function Description


The device in relay mode will forward the received data backward according to the set path until the target device for the purpose of extending the transmission distance.

Module Settings

1. MD0 = 0, MD1 = 0
2. Need to configure 0x07 special function register to 0x0020, relay mode
3. Set the previous group number address and the next group number address in relay mode (0x1B~0x1E registers)
4. The channels of the relay module and the transmitter module must be set to the same
5. MD0 = 1, MD1 = 0


8. Timing Chart

8.1 Data Transfer Timing Diagram

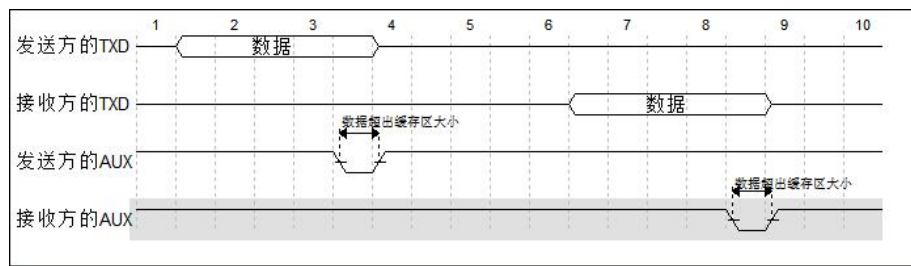

8.2 State Switching Timing Diagram

The module will have a switching delay T_{sc} to switch from any working state to the next working state. After switching to the next working state, if the module does not perform other working state switching operations, then the module will keep working in the switched working state. The working state switching has nothing to do with the previous working state of the module, the user only needs to perform the state switching delay during the switching process, and then select the low delay working state pins MD0 and MD1 for high and low level operation to switch to the desired working state.

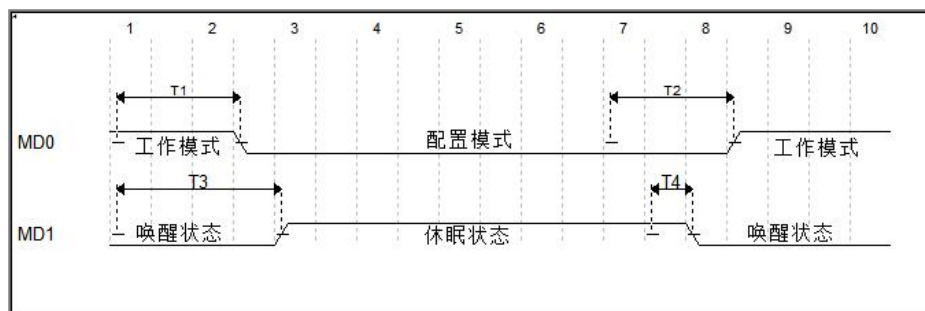


Symbols	Description	Minimum value	Typical values	Maximum value	Unit
T1	Switch from working mode to configuration mode		10		ms
T2	Switch from configuration mode to working mode		30		ms
T3	Switch from wake-up mode to sleep mode		10		ms
T4	Switch from sleep mode to wake-up mode		10		ms

Note: The working state switching can only be switched when AUX is high and the module is idle at this time; if AUX is low, it means that the module is busy at this time, the transmitting (receiving) is not empty and the data is not yet sent (received), so the user needs to add a delay and wait for the data to be sent and received before the working state switching can start.


8.3 Module Command Timing Diagram

The command timing diagram is as follows.


1. Module parameter configuration commands

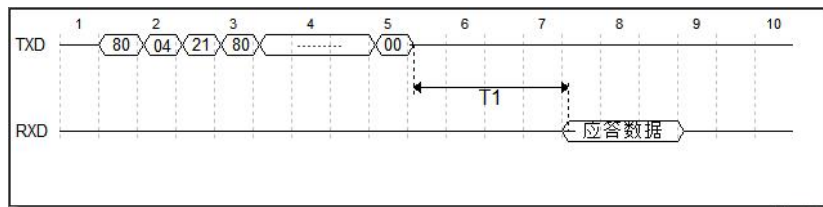


2. Module encryption key setting command

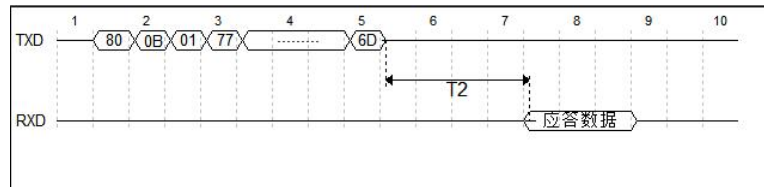


3. Read module configuration parameters command

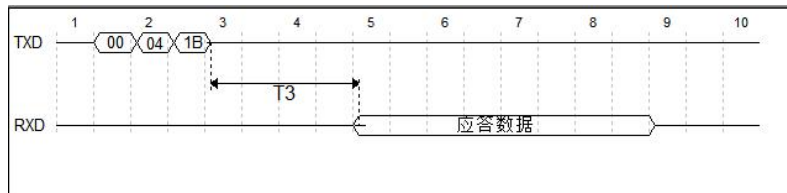


4. Read module hardware version number command

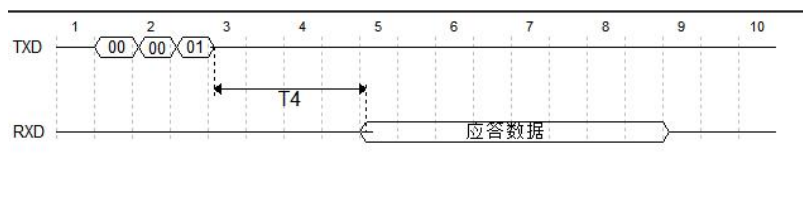


5. Module reset command

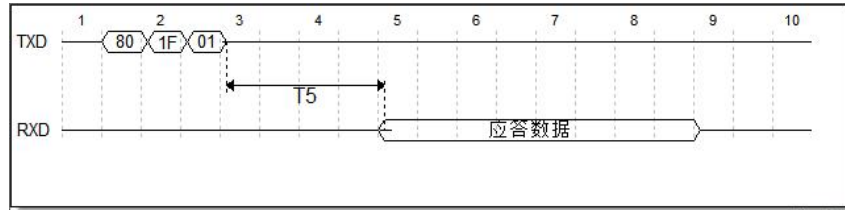

6. Restore module default parameter command

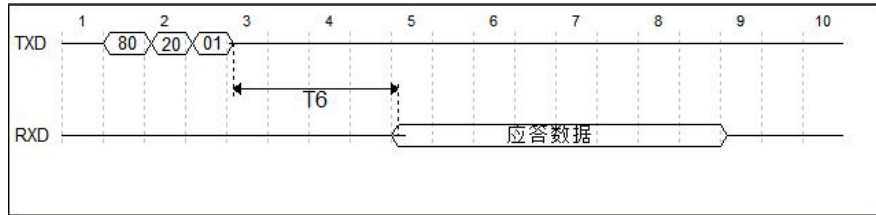


7. Read current data signal RSSI and environment RSSI commands directly

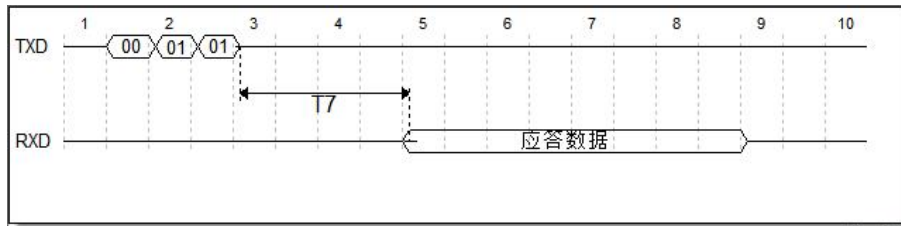


Parameter Name	T_answer	Description	Minimum value	Typical values	Maximum value	Unit
Module Command Answer Delay	T1	Parameter configuration delay		100		ms
	T2	Read module configuration parameters delay		40		ms
	T3	Read module hardware version number delay		20		ms
	T4	Waiting for module reset delay		20		ms
	T5	Read module voltage delay		20		ms
	T6	Configure module encryption key delay		30		ms
	T7	Recovery module default parameter delay		20		ms
Waiting for data transmission completion delay	T_Packet	Delay time required to finish sending a packet of data				ms

9. Package Information

9.1 Mechanical size(unit:mm)

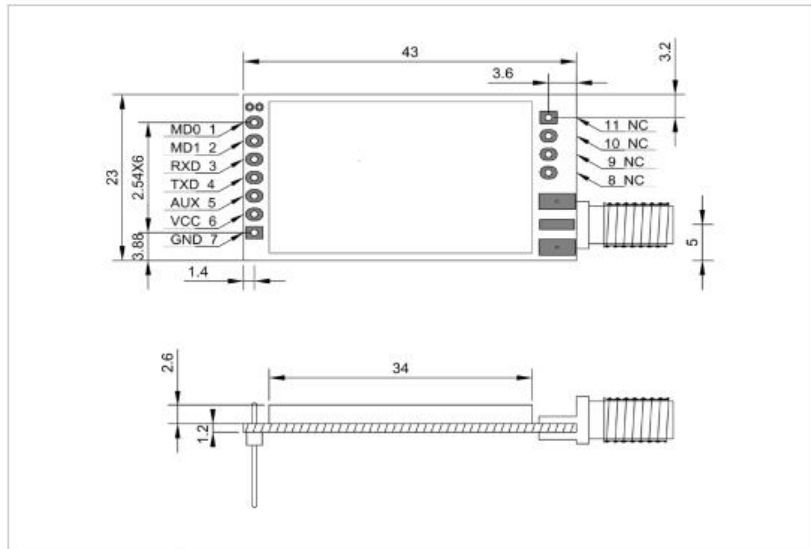

9.2 Reference pad design (unit: mm)

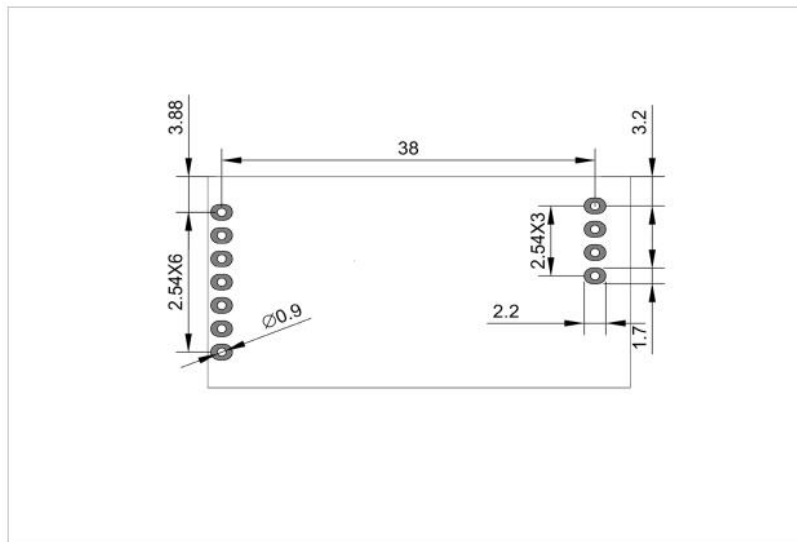

Important Notes and Disclaimers

Due to the continuous improvement of hardware and software of the product, this specification is subject to change, and the latest version of the specification shall prevail in the end.

Users who use this product need to pay attention to the product dynamics at the official website so that users can get the latest information of this product in time.

The pictures and diagrams used in this specification are for illustrating the functions of this product and are for reference only.

The measurement data in this specification are measured by our company at room temperature for reference only, please refer to the actual measurement.

Chengdu Ashining Technology Co., Ltd. reserves the right of final interpretation and modification of all contents in this specification.